



In partnership with Salt Lake City, Department of Sustainability, The Home Depot is pleased to offer the following eligible cordless battery products inclusive of Lawn Mowers, Leaf Blowers and String Trimmers.









Home Depot #	Brand	Product Description
1004693396	DEWALT	20V MAX Brushless Cordless Battery Powered String Trimmer Kit with (1) 5Ah Battery & Charger
1005653298	DEWALT	60V MAX Brushless Cordless Battery Powered Attachment Capable String Trimmer Kit, (1) FLEXVOLT 3Ah Battery and Charger
1004693515	DEWALT	20V MAX 125 Mph 450 CFM Brushless Cordless Battery Powered Handheld Leaf Blower with (1) 5Ah Battery & Charger
1004162269	DEWALT	60V MAX 125 MPH 600 CFM Brushless Cordless Battery Powered Handheld Leaf Blower Kit, (1) 3Ah Battery & Charger
1004773266	DEWALT	20V MAX 125 MPH 450 CFM Cordless Brushless Battery Powered Handheld Leaf Blower (Tool Only)
1004773277	DEWALT	20V MAX Brushless Cordless Battery Powered String Trimmer (Tool Only)
1010014644	DEWALT	20-Volt MAX 21.5 in. Lithium-Ion Battery Powered Self Propelled Lawn Mower with Two (2) 10.0 Ah Batteries and Charger
1010014318	DEWALT	20-Volt MAX 21.5 in. Lithium-Ion Battery Powered Walk Behind Push Mower with Two (2) 10.0 Ah Batteries and Chargers
1005806986	MAKITA	LXT 18V Lithium-Ion Brushless Cordless String Trimmer Kit
1006572968	MAKITA	XGT 40V max Brushless Cordless 15 in. String Trimmer Kit (4.0 Ah)
1004656636	MAKITA	116 MPH 459 CFM 18V LXT Lithium-Ion Brushless Cordless Leaf Blower Kit
1006495256	MAKITA	XGT 40V Max Brushless Cordless Leaf Blower Kit (4.0Ah)
1002624932	MAKITA	120 MPH 473 CFM 18V X2 (36V) LXT Lithium-lon Brushless Cordless Leaf Blower Kit with 2 Batteries 5.0Ah and Charger
1004740520	MAKITA	116 MPH 459 CFM 18V LXT Lithium-Ion Brushless Cordless Leaf Blower (Tool-Only)
1006826497	MAKITA	18V X2 (36V) LXT Lithium-Ion Cordless 21 in. Walk Behind Self-Propelled Lawn Mower Kit w/4 Batteries (5.0Ah)
1008466297	MAKITA	40V max XGT Brushless Cordless 21 in. Walk Behind Self-Propelled Commercial Lawn Mower Kit (4.0Ah)
1010140249	MILWAUKEE	M18 FUEL 18V Brushless Cordless 17 in. Dual Battery Straight Shaft String Trimmer with (2) 8.0 Ah Batteries and Charger
1003924257	MILWAUKEE	M18 FUEL 18V Lithium-Ion Brushless Cordless String Trimmer with QUIK-LOK Attachment Capability and 8.0 Ah Battery
1003574777	MILWAUKEE	M18 FUEL 120 MPH 450 CFM 18-Volt Lithium-Ion Brushless Cordless Handheld Blower Kit with 8.0 Ah Battery, Rapid Charger
1008125585	MILWAUKEE	M18 FUEL Dual Battery 145 MPH 600 CFM 18-Volt Lithium-Ion Brushless Cordless Handheld Blower (Tool-Only)
1002780791	MILWAUKEE	M18 FUEL 120 MPH 450 CFM 18-Volt Lithium-Ion Brushless Cordless Handheld Blower (Tool-Only)
1003924244	MILWAUKEE	M18 FUEL 18V Lithium-Ion Cordless Brushless String Grass Trimmer with Attachment Capability (Tool-Only)
1007032076	MILWAUKEE	M18 FUEL Brushless Cordless 21 in. Walk Behind Dual Battery Self-Propelled Mower w/(2) 12.0Ah Battery and Rapid Charger
1009030750	RIDGID	18V Brushless 14 in. Cordless Battery String Trimmer (Tool Only)
1008662081	RIDGID	18V Brushless 130 MPH 510 CFM Cordless Battery Leaf Blower (Tool Only)
1005821039	RYOBI	ONE+ HP 18V Brushless 13 in. Cordless Battery String Trimmer with 4.0 Ah Battery and Charger
732355	RYOBI	ONE+ 18V 10 in. Cordless Battery String Trimmer and Edger with 1.5 Ah Battery and Charger
1007094097	RYOBI	40V HP Brushless Whisper Series 17 in. Cordless Battery Carbon Fiber Shaft String Trimmer w/ 6.0 Ah Battery & Charger
1005822422	RYOBI	40V HP Brushless 15 in. Cordless Carbon Fiber Shaft Attachment Capable String Trimmer with 4.0 Ah Battery and Charger
1003975975	RYOBI	40V Expand-It Cordless Battery Attachment Capable String Trimmer with 4.0 Ah Battery and Charger
1010335614	RYOBI	ONE+ 18V 10 in. Cordless Battery String Trimmer/Edger with 2.0 Ah Battery and Charger
1010453172	RYOBI	40-Volt HP String Trimmer Kit
1010323297	RYOBI	40V 15 in. Expand-It Cordless Battery Attachment Capable String Trimmer with 4.0 Ah Battery and Charger
1002781279	RYOBI	ONE+ 18V 90 MPH 200 CFM Cordless Battery Leaf Blower/Sweeper with 2.0 Ah Battery and Charger
1001554069	RYOBI	ONE+ 18V 100 MPH 280 CFM Cordless Battery Variable-Speed Jet Fan Leaf Blower with 4.0 Ah Battery and Charger
1010333674	RYOBI	ONE+ 18V 90 MPH 250 CFM Cordless Battery Leaf Blower/Sweeper with 2.0 Ah Battery and Charger
1004867763	RYOBI	40V Brushless 125 MPH 550 CFM Cordless Battery Whisper Series Jet Fan Blower with 4.0 Ah Battery and Charger
1007048661	RYOBI	40V HP Brushless Whisper Series 155 MPH 600 CFM Cordless Battery Leaf Blower with 4.0 Ah Battery and Charger
1006393501	RYOBI	40V HP Brushless Whisper Series 190 MPH 730 CFM Cordless Battery Jet Fan Leaf Blower with (2) 4.0 Ah Batteries & Charger
1007194184	RYOBI	40V HP Brushless Whisper Series 190 MPH 730 CFM Blower and Backpack Battery w/ (2) 6.0 Ah Batteries & Charger
1008630126	RYOBI	40V HP Brushless 100 MPH 600 CFM Cordless Leaf Blower/Mulcher/Vacuum with (2) 4.0 Ah Batteries and Charger
1006913867	RYOBI	40V HP Brushless Whisper Series 165 MPH 730 CFM Cordless Battery Backpack Blower with (2) 6.0 Ah Batteries and Charger
1005437792	RYOBI	40V 110 MPH 525 CFM Cordless Battery Variable-Speed Jet Fan Leaf Blower with 4.0 Ah Battery and Charger
1010455171	RYOBI	ONE+ 18V 100 MPH 350 CFM Cordless Battery Variable Speed Jet Fan Leaf Blower with 4.0 Ah Battery and Charger
1010455172	RYOBI	40-Volt HP Brushless Whisper Series 160 MPH 650 CFM Cordless Battery Leaf Blower with 4. 0 Ah Battery and Charger
1010323295	RYOBI	40-Volt Cordless 120 MPH 550 CFM Blower With 4.0 Ah Battery and Charger
1006779395	RYOBI	40V HP Brushless Whisper Series 21. in Walk Behind Self-Propelled All Wheel Drive Mower - (2) 6.0 Ah Batteries & Charger
1010323292	RYOBI	ONE+ 18V 100 MPH 350 CFM Cordless Battery Variable-Speed Jet Fan Leaf Blower (Tool Only)
1010323294	RYOBI	ONE+ HP 18V Brushless Cordless 220 CFM 140 MPH Compact Blower (Tool-Only)
1007267036	RYOBI	ONE+ HP 18V Brushless Whisper Series 130 MPH 450 CFM Cordless Battery Leaf Blower (Tool Only)
1007442419	RYOBI	ONE+ 18V 13 in. Cordless Battery String Trimmer/Edger (Tool Only)
1008661769	RYOBI	40V 12 in. Cordless Battery String Trimmer (Tool Only)
1007048670	RYOBI	40V HP Brushless Whisper Series 155 MPH 600 CFM Cordless Battery Leaf Blower (Tool Only)
1005437797	RYOBI	40V 110 MPH 525 CFM Cordless Battery Variable-Speed Jet Fan Leaf Blower (Tool-Only)
1004460283	RYOBI	40V Vac Attack Cordiess Battery Leaf Vacuum/Mulcher (Tool Only)
1007573600	RYOBI	40V 120 MPH 450 CFM Cordless Battery Variable-Speed Jet-Fan Blower (Tool-Only)
1007572151	RYOBI	ONE+ HP 18V Brushless Whisper Series 15 in. Cordless Battery String Trimmer (Tool Only)
1010323290	RYOBI	18-Volt ONE+ HP Brushless Cordless 130 MPH 510 CFM Blower (Tool Only)
1007572142	RYOBI	40V HP Brushless Whisper Series 160 MPH 650 CFM Cordless Battery Leaf Blower (Tool Only)
1005788802	RYOBI	40V HP Brushless 21 in. Cordless Battery Walk Behind Self-Propelled Lawn Mower with (2) 6.0 Ah Batteries and Charger
1005788757	RYOBI	40V HP Brushless 21 in. Cordless Battery Walk Behind Multi-Blade Self-Propelled Mower - (2) 6.0 Ah Batteries & Charger
1006431849	RYOBI	40V HP Brushless 20 in. Cordless Electric Battery Walk Behind Self-Propelled Mower with 6.0 Ah Battery and Charger
1005788740	RYOBI	ONE+ 18V 13 in. Cordless Battery Walk Behind Push Lawn Mower with 4.0 Ah Battery and Charger
1005788778	RYOBI	ONE+ HP 18V Brushless 16 in. Cordless Battery Walk Behind Push Lawn Mower with (2) 4.0 Ah Batteries and (1) Charger
1006431841	RYOBI	40V HP Brushless 20 in. Cordless Battery Walk Behind Push Mower with 6.0 Ah Battery and Charger