


1300 South Traffic Calming: 1700 East to 1900 East

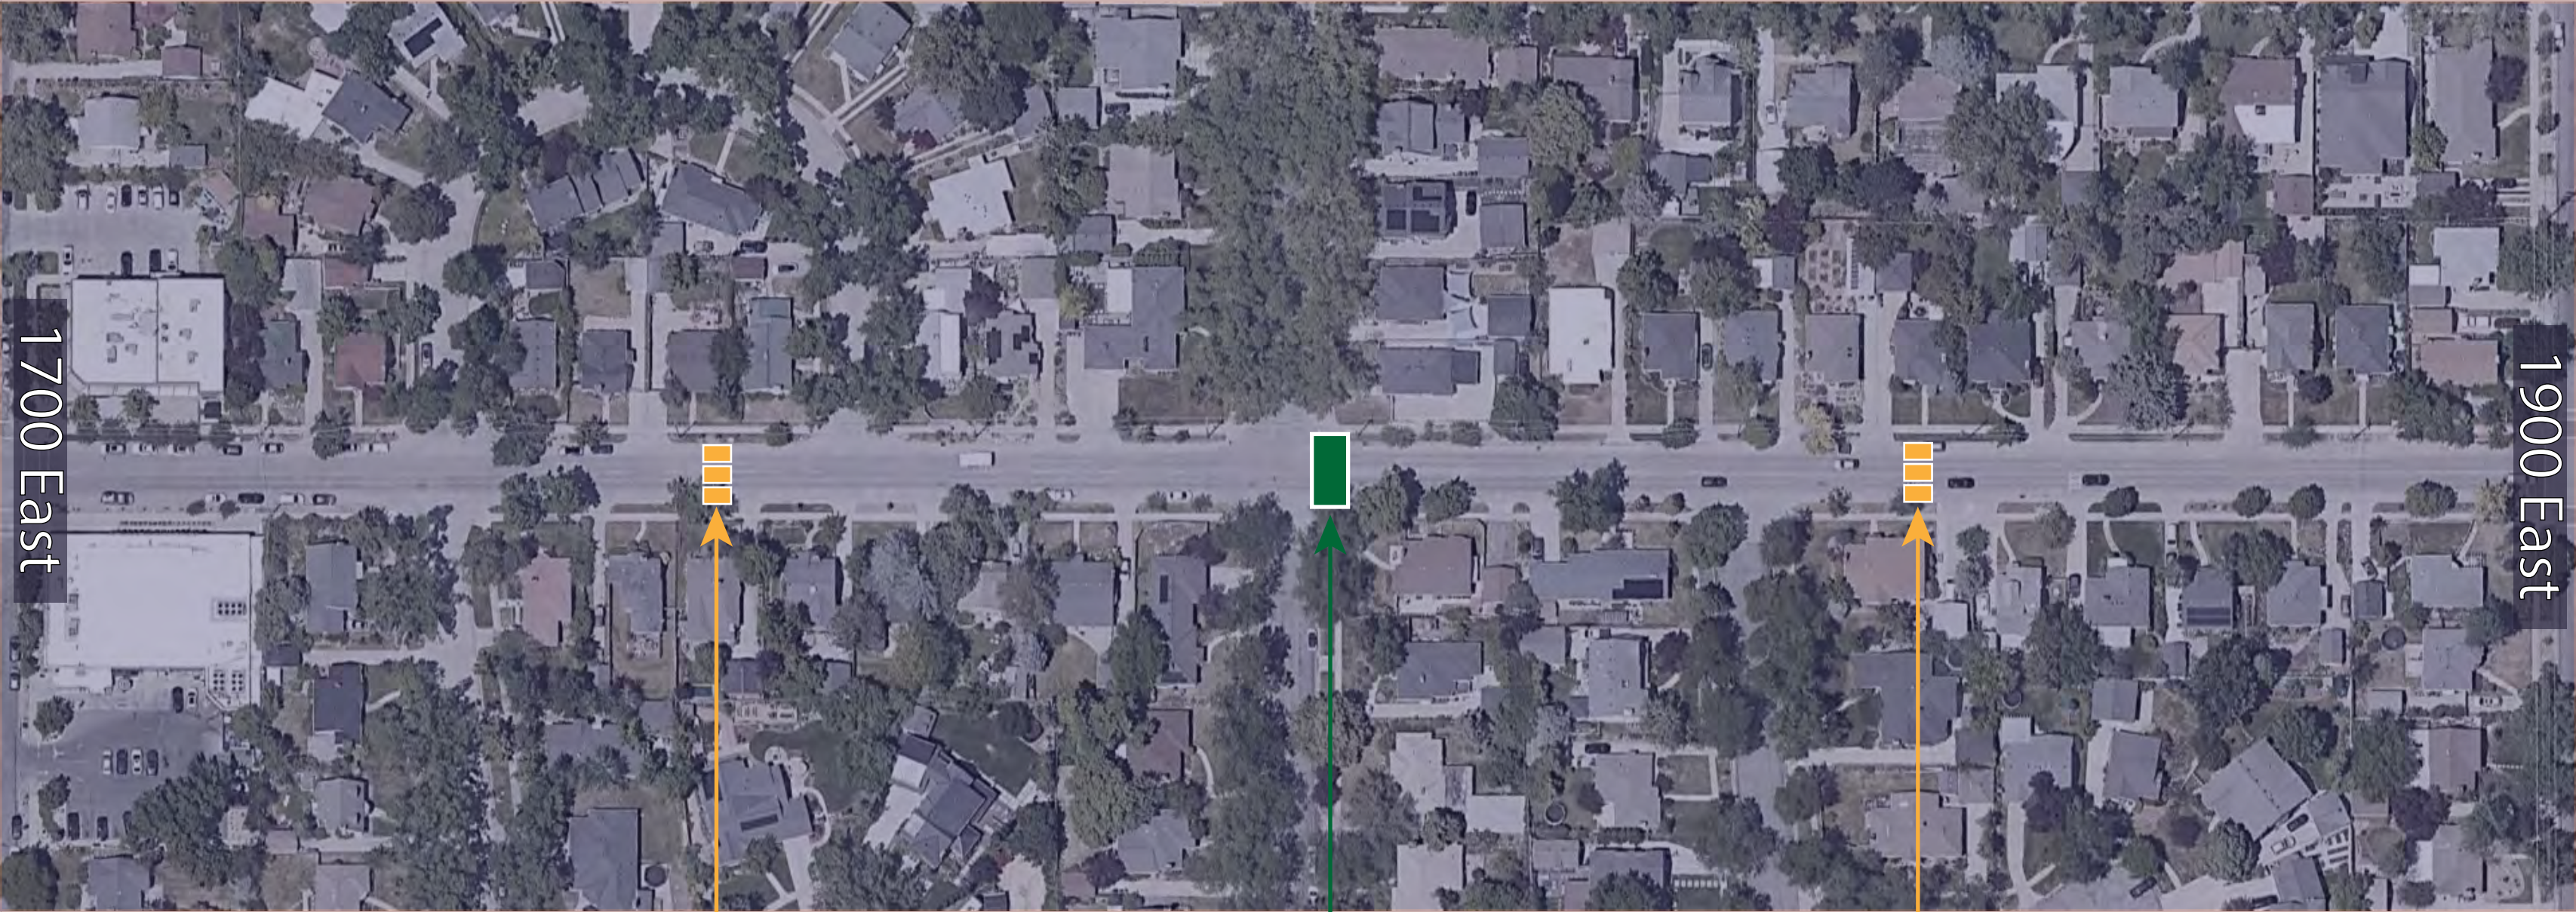


Speed Cushion
Placement

Raised Crosswalk
Placement

Speed Cushion
Placement

1300 South Traffic Calming: 1900 East to 2100 East

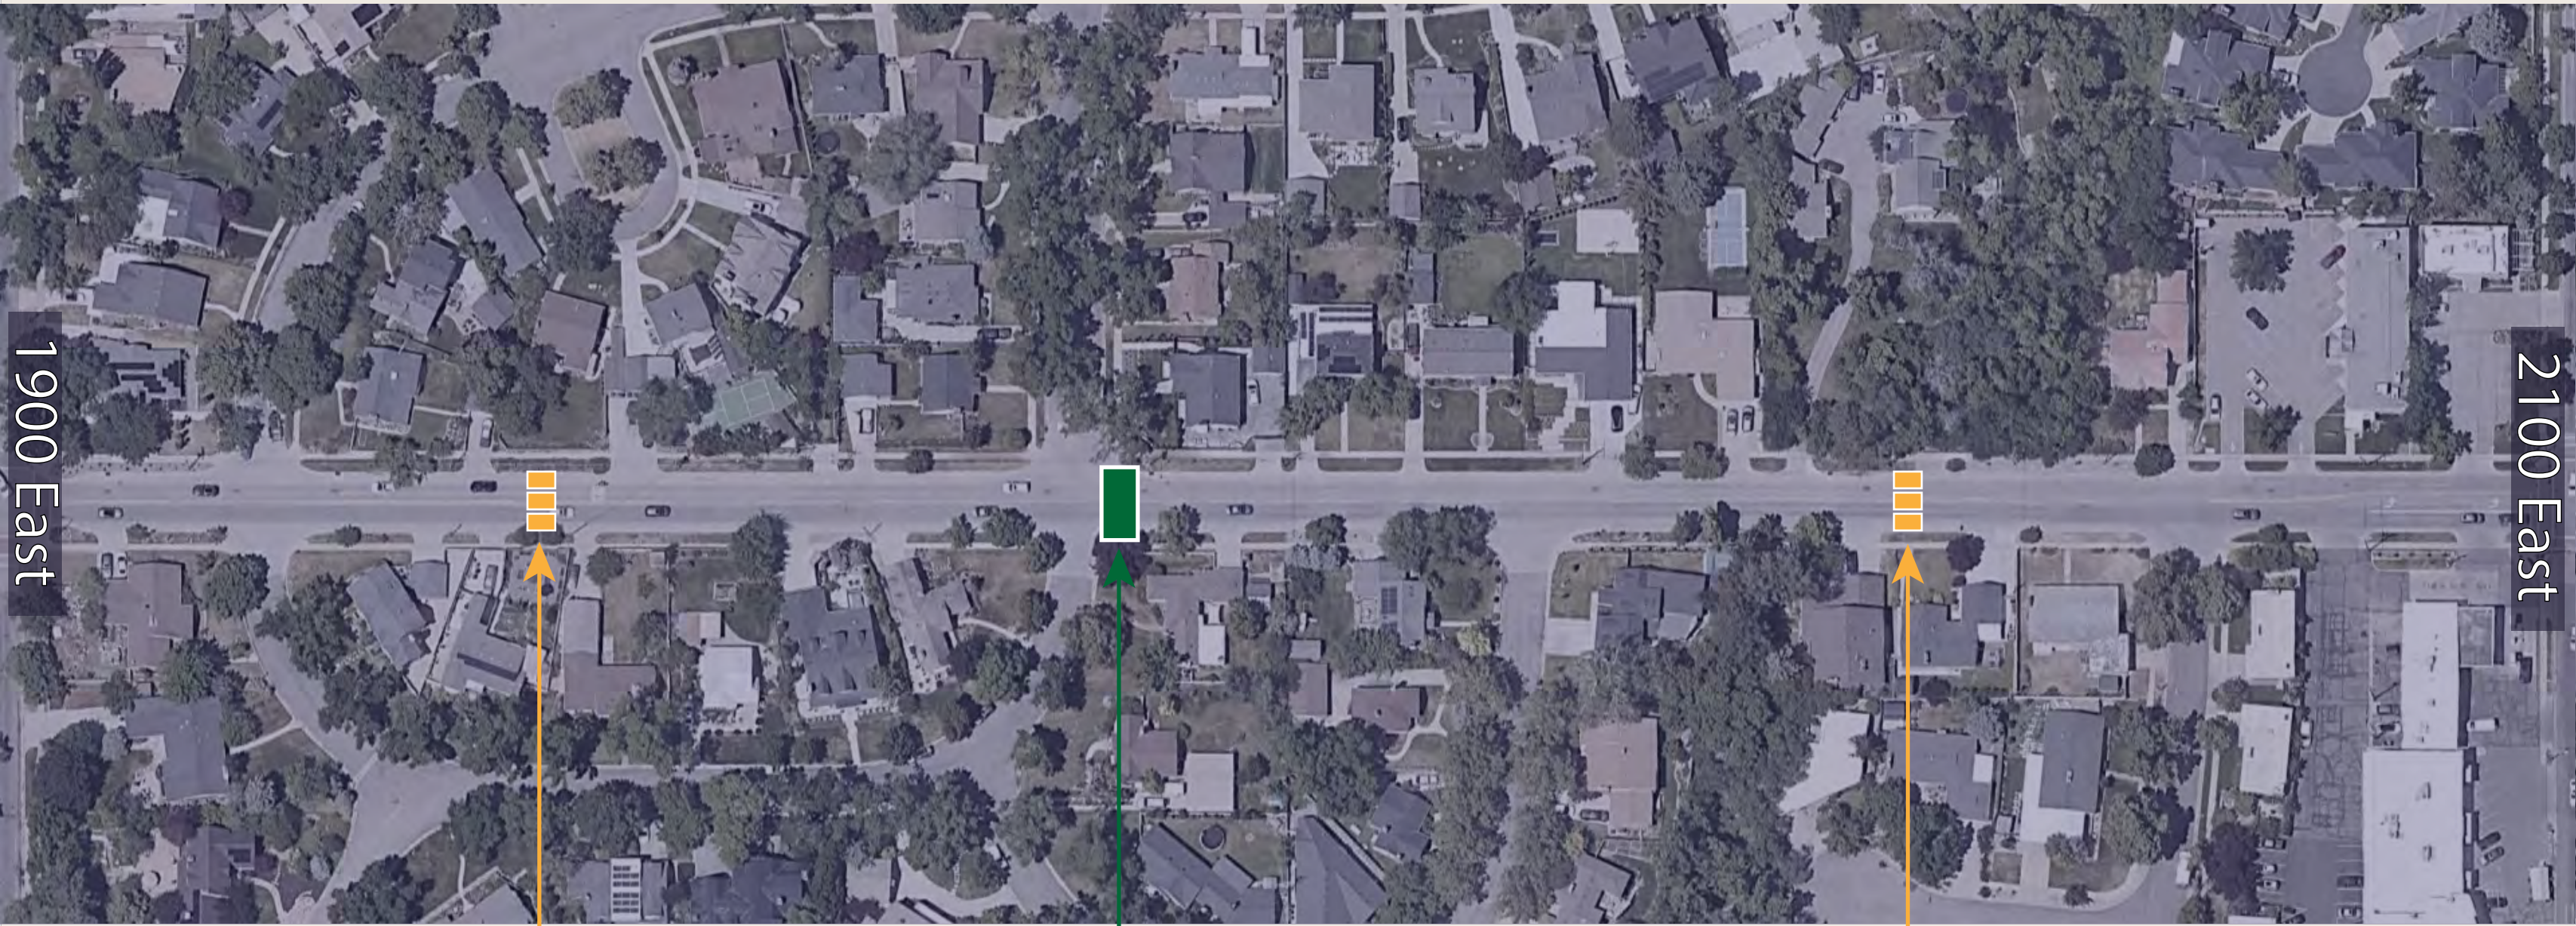

1900 East


2100 East

Speed Cushion
Placement

Raised Crosswalk
Placement

Speed Cushion
Placement

1300 South Traffic Calming:
2100 East to Foothill Blvd.

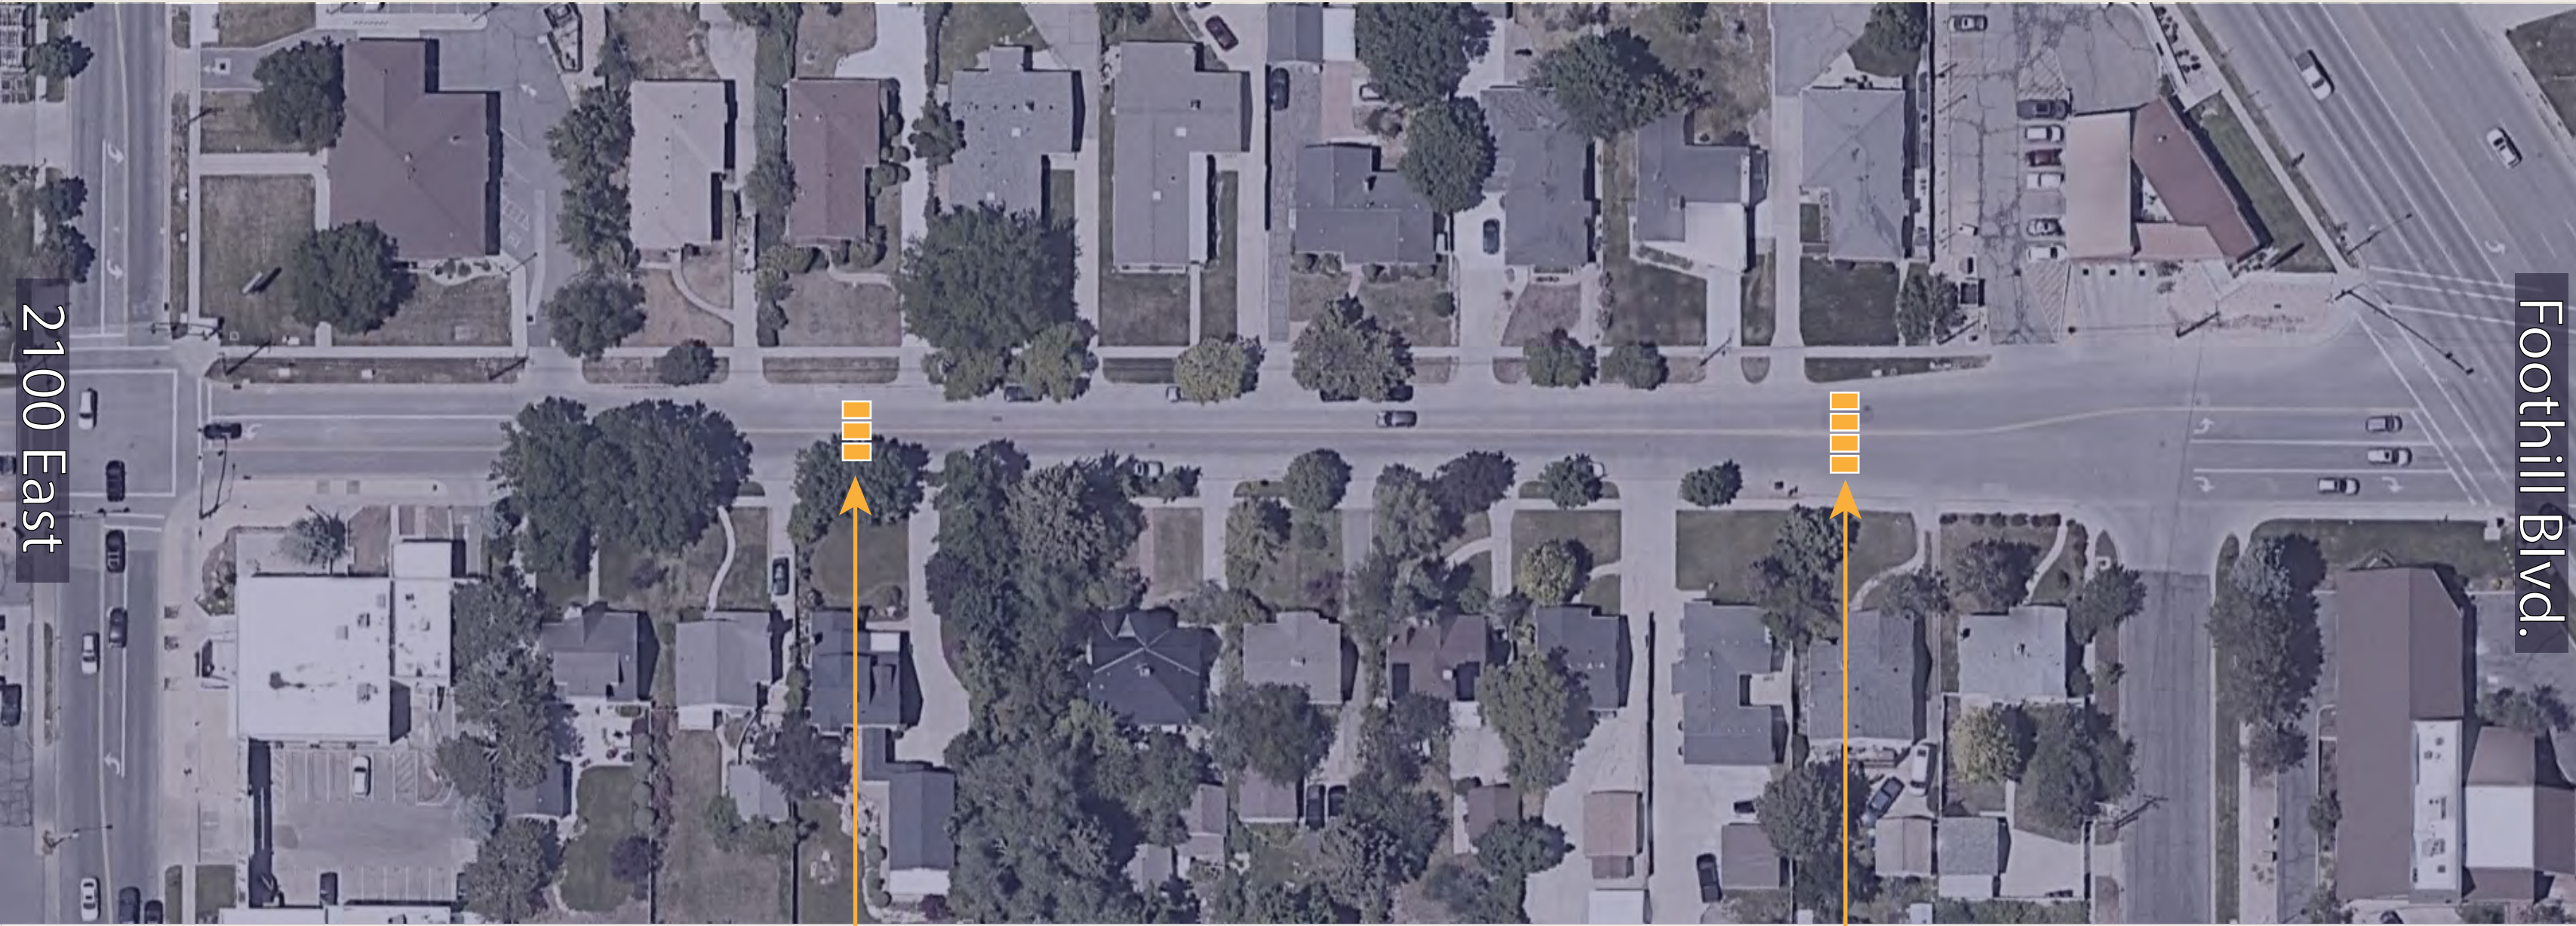


2100 East

Foothill Blvd.

Speed Cushion
Placement

Speed Cushion
Placement

2100 East Traffic Calming: 1300 South to 1200 South

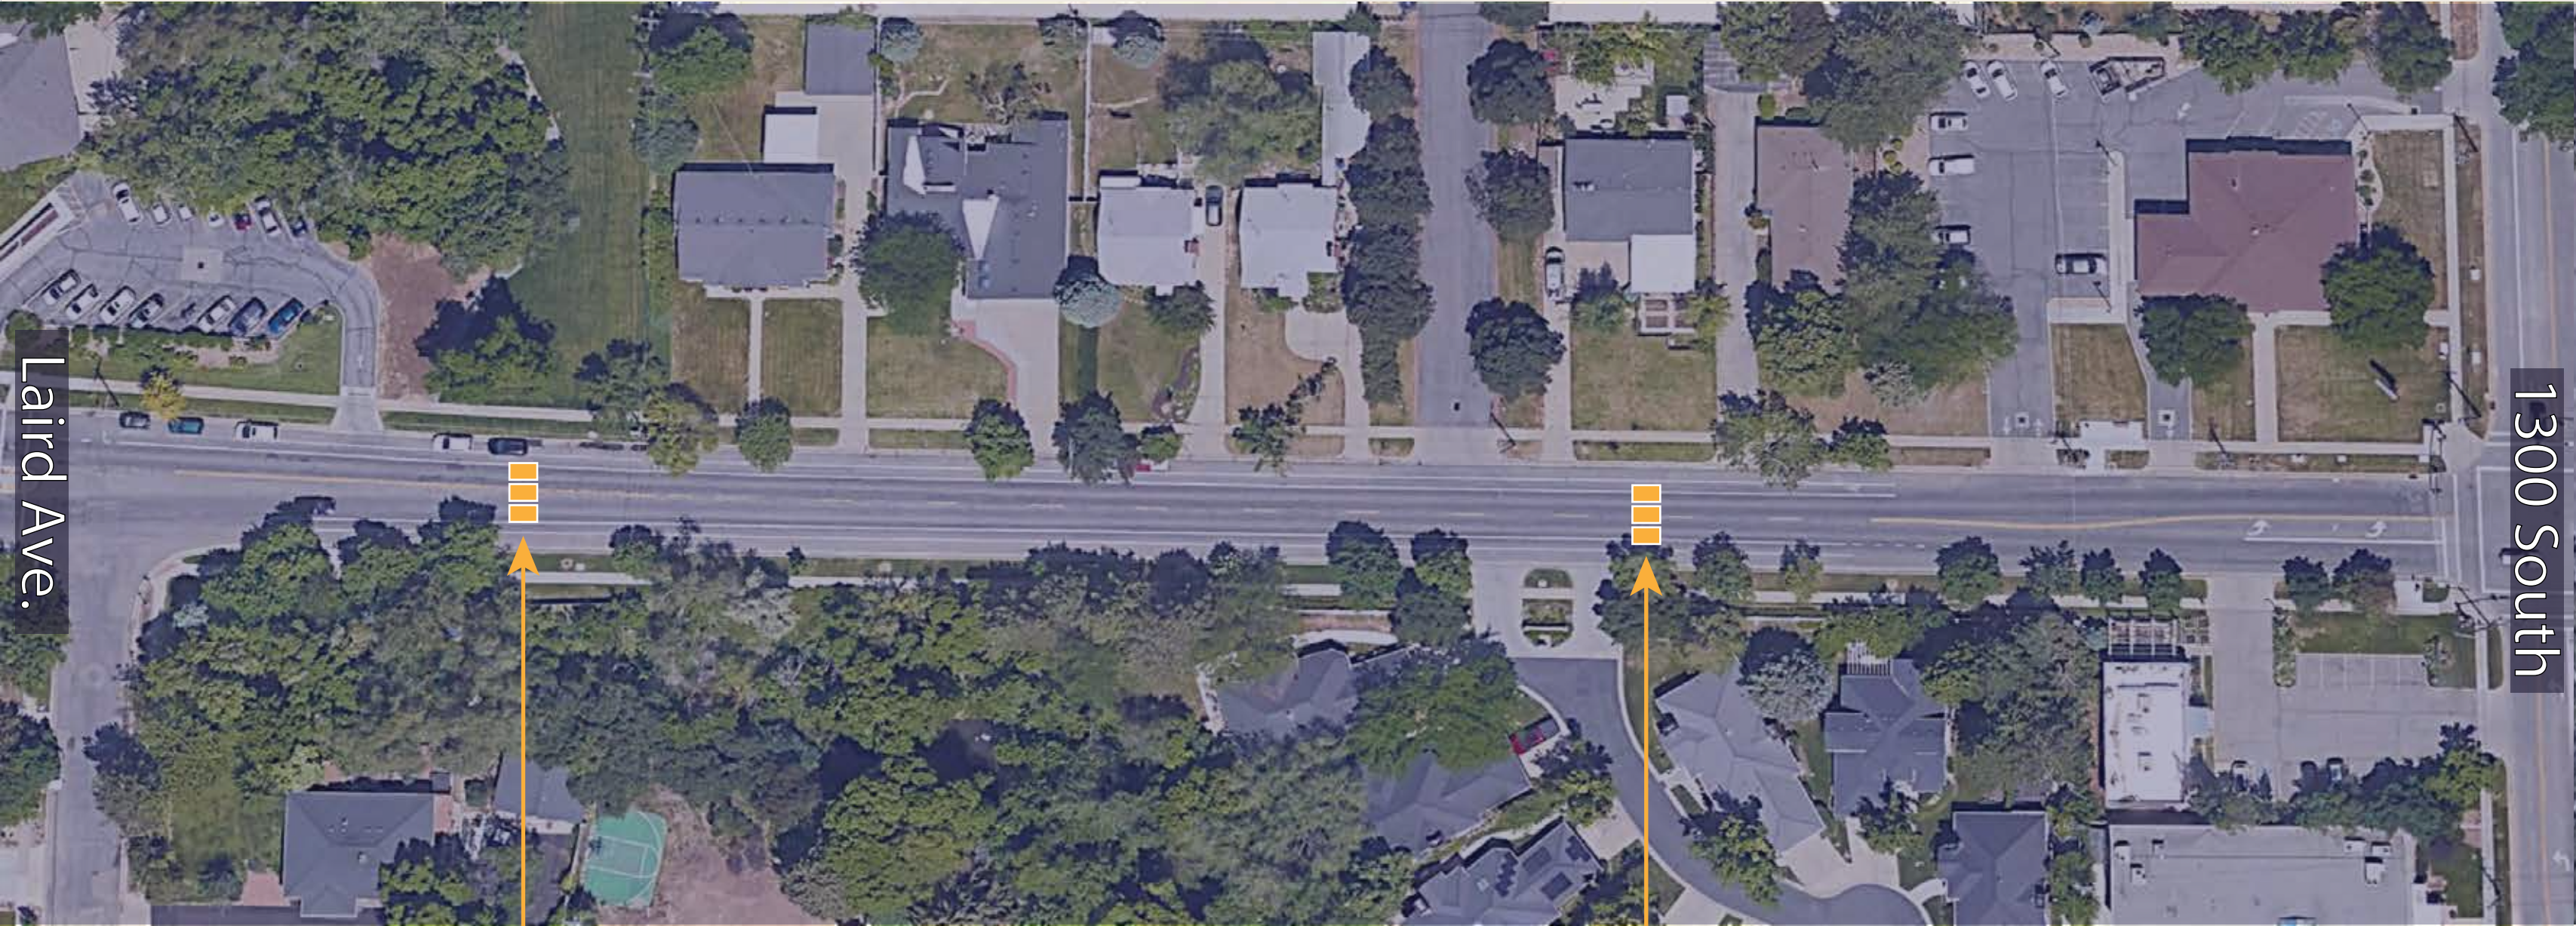

Laird Ave.

1300 South

Speed Cushion
Placement

Speed Cushion
Placement

2100 East Traffic Calming: 1300 South to Browning Ave



1300 South

Browning Ave.

Raised Crosswalk Placement

Speed Cushion Placement